

# LEDAH

# LEDAH Electric stapler

## TROUBLESHOOTING AND UNJAMMING

If your stapler does not operate:

- 1 Check if the stapler is plugged into an outlet.
- 2 Make sure that the channel is pushed in all the way
- 3 Make sure that your paper is hitting the automatic stapling lever.

If you are experiencing jamming:

- 1 Stop stapling. Continued stapling will make the problem worse and may damage the stapler.
- 2 Remove AC plug from the outlet.
- 3 Release the channel
- 4 Remove the strip of staples from the channel.
- 5 Locate the jammed staples and remove.
- 6 If jamming continues, try using different staples.

## SPECIFICATIONS:

Operating Voltage: 220VAC, 50Hz

Operating Voltage: 1AMP

Staple Size: Standard 1/4" (6.35mm) deep staples, 24/6, 26/6

Channel capacity: 210 staples

Stapling capacity: Up to 20 sheets of ordinary bond paper

Stapling rate: 45 times/minute

Dimensions: 66mm x 13mm x 201mm

Weight: 650g

## ▲ CUT ABOVE THE REST

# LEDAH

## INSTRUCTION SHEET


Thank you for purchasing your new LEDAH Electronic Stapler.

This stapler has been designed, engineered and manufactured to give you years of flawless operation. Proper care and use will extend its life. Please read the instructions carefully before using your new stapler.

## BEFORE YOU BEGIN

- 1 This stapler has been designed to staple a maximum of 20 sheets of standard bond paper. Do not attempt to insert more than the recommended number of sheets.
- 2 Use only 220V-240V AC outlets.
- 3 Unplug your stapler before cleaning or attempting to unjam it.
- 4 The quality of the staples used will influence the performance of your stapler. We recommend that you use standard full strip chisel pointed staplers, available from your local office products dealer.

## PART IDENTIFICATION

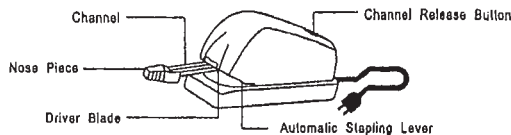

## ▲ CUT ABOVE THE REST




## INSTRUCTION MANUAL

Before operating this unit please read and follow all instructions.

Staples: For best results, use 24/6, 26/6 Chisel Pointed Staples.

Deformed or inferior quality staples will result in jamming and incomplete stapling.

## LOADING AND USING YOUR NEW LEDAH ELECTRIC STAPLER

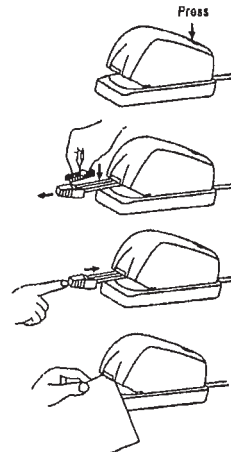

1. Plug your stapler into a standard 220V-240V outlet.
2. Release the staple channel button which is located at the top of the stapler. Press it and the staple channel will pop out the front.
3. Drop a full strip of staples into the channel.
4. Push the channel back into the stapler until it is locked into position.
5. Now you are ready to staple. Simply take your paper and insert it into the mouth of the stapler. A staple will be driven when the paper hits the automatic stapling lever.